

## Contempo Basic

- 1 Tilt and slip the inside lip of the headrail into the swivel bracket hooks. Raise the back of the headrail so that it fits completely inside the bracket (Fig. 3).
- 2 Turn locks on bracket making certain they are securely locked (Fig. 4).

FIGURE 3


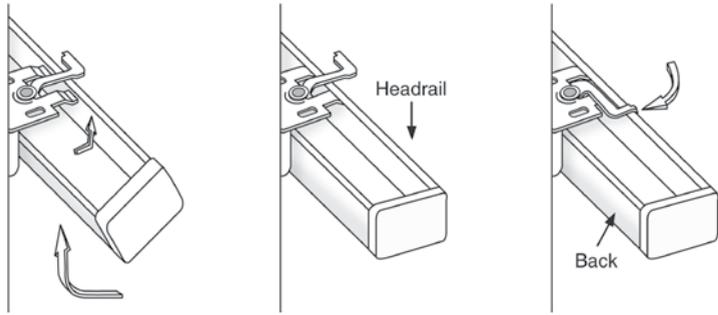



FIGURE 4

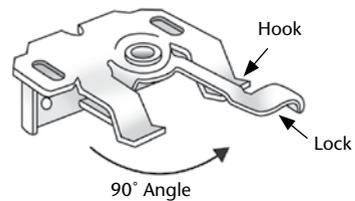

## F Attach Hold Down Brackets (Optional)

If mounting on a door; your blind should include hold down brackets.


- 1 With the blind at its full drop, place the pins on the hold down brackets into the holes in the bottom rail end caps and mark where to drill the mounting holes.
- 2 Attach the hold down brackets with one screw through the side hole or two through the end holes. Be sure both bracket pins are aligned and level.

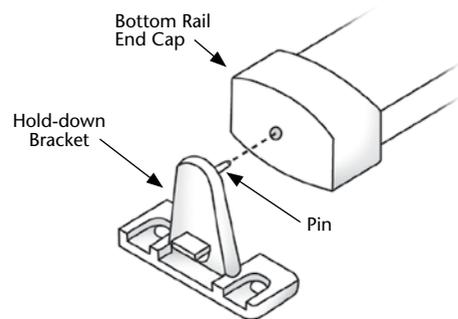

## G Removing Blinds from the Brackets


### Contempo Classic, Deluxe & Ultra

Reverse the installation procedure—loosen the tab locking screw, tilt the headrail, and lift it off the bracket hook.

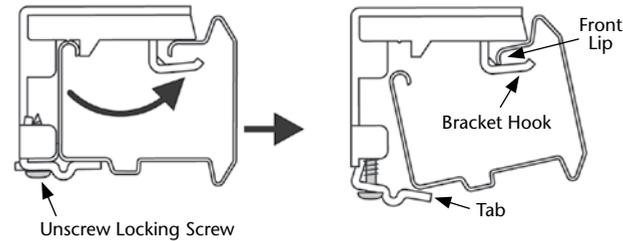

### Contempo Basic

Swivel the tab behind each bracket from right to left so that the head rail is no longer secure. Pull the blind down and forward at the same time, until the blind releases. If the tab is hard to swivel, a small flat screw driver may be used to push it over.

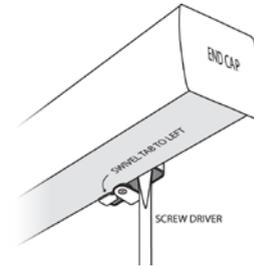

## Child Safety



At Great Windows™ child safety is first. All of our products are fitted with the highest quality components that provide the most complete safety measures in the industry. Our Aluminum Blinds, for example, are finished with break away tassels that release when pressure is applied. Cord cleats are also available upon request.

## Cleaning and Care

In order to keep your window treatments looking new, follow the recommended methods for care and maintenance. Regular care will result in better appearance and performance from your window coverings.

Dusting	Hand-Held Vacuum	Compressed Air	Hair Dryer Spot	Cleaning Water	Immersion Ultrasonic	Cleaning
X	X	X	X	X	X	X

**GREATWINDOWS**  
FROM NEXT DAY BLINDS

8251 Preston Ct., Jessup, MD 20794  
www.greatwindows.com

**1-800-556-6632**

**GREATWINDOWS**

FROM NEXT DAY BLINDS



# Aluminum Blinds


Contempo Classic, Deluxe, Ultra & Basic

INSTALLATION INSTRUCTIONS

*meticulously made  
by hand in our  
Great Windows factory*

## A Getting Started

**The Parts:** Before starting, please remove and identify the following parts required for the installation of your blinds:

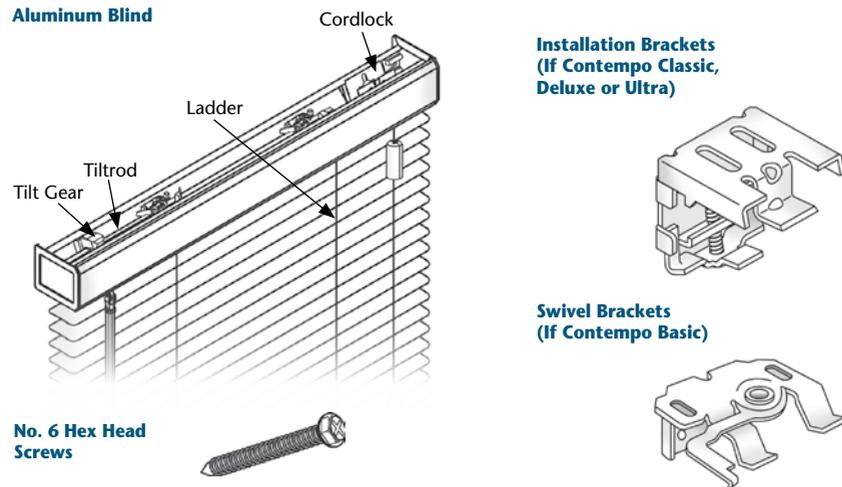

## B The Tools

To install your Great Windows™ Aluminum Blinds, you will need a few basic tools:

- Measuring tape
- Flat blade screwdriver
- Pencil
- Phillips screwdriver
- Power drill

### Important Note:


*Screws provided are for installation into wooden frames only. For metal surfaces, use suitable sheet metal screws and pre-drill holes. For concrete, stone, brick, or tile, use a carbide drill and appropriate anchors and screws. For wallboard or plaster, use hollow wall anchors and/or longer screws to reach framing or stud. In all cases, follow the fastener manufacturer's recommendations.*

## C Sorting Your Blinds

Inside the headrail of your Great Windows™ Aluminum Blind, there is a sorting label. This appears as seen below:


On this label, you will recognize:

1. Order size of the blind
2. Room location (If not present, info not given at time of order)
3. Whether the blind was ordered for inside mount (IB), or outside mount (OB)

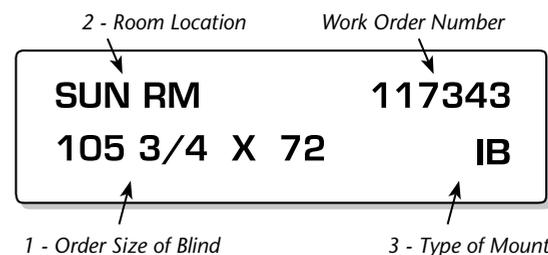

## D Bracket Installation

- 1 Position the two end brackets on the mounting surface so that they will be located between 2" and 6" from the ends of the headrail. If additional brackets are required, space evenly between the end brackets. **Avoid placing brackets at the same location as blind's ladders.**

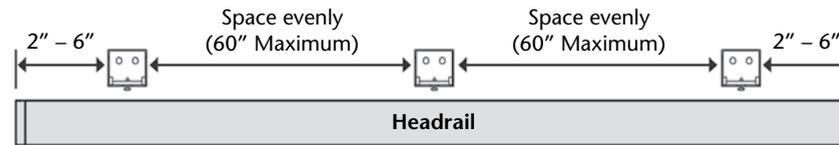


- 2 If more brackets are required (see chart below), space the additional bracket(s) evenly between the end brackets.

Blind Width	Under 60 Sq. Ft.	60 Sq. Ft. and Over
7" - 60"	2	3
60 1/8" - 120"	3	4
Over 120"	4	5


### Inside Mount

- 1 A minimum window frame depth of 7/8" is required for bracket attachment. A depth of 1 3/4" is required to fully recess the blind.
- 2 Attach the installation bracket with two screws through the two holes in the top of the brackets. Be sure the front edges of the brackets are aligned.

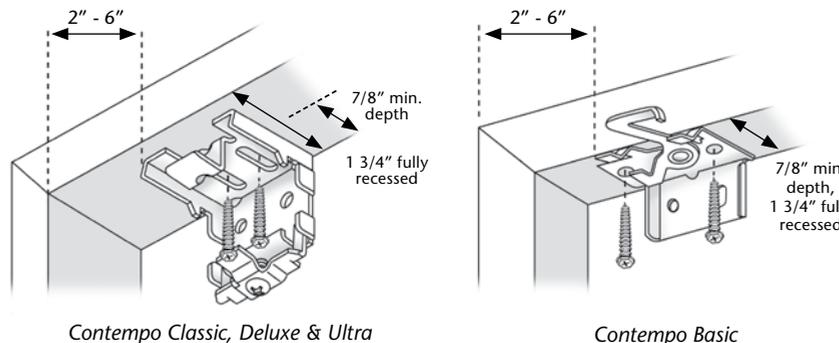

### Outside Mount

- 1 A flat surface at least 5/8" high is required for bracket attachment.
- 2 Attach the installation brackets with two screws through the rear of the brackets. Use a level to check that the tops of the brackets are aligned at the same height.

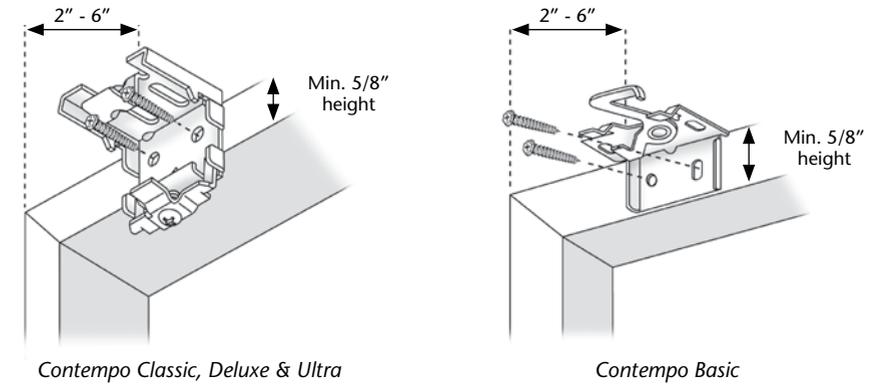

## E Installing Your Blinds into the Brackets

There are two possible bracket designs. For Contempo Classic, Deluxe and Ultra, make sure the bracket tab is fully extended to the head of the screw before beginning. For Contempo Basic make sure the lock is at a 90° angle (See Fig. 4).

### Contempo Classic, Deluxe & Ultra

- 1 Place the headrail in the brackets so the front lip rests on the bracket hook and the rear bottom corner rests on the tab. The blind should hang in the bracket (Fig. 1).
- 2 Tilt headrail up and push it back until it is flush against the top of the bracket. Tighten the locking screw on all brackets to hold blind securely in place (Fig. 2).

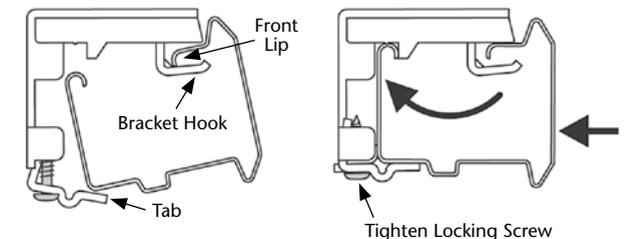


FIGURE 1

FIGURE 2