

## Step One: Inside or Outside?

**INSIDE MOUNT** shows off your window trim, but requires sufficient depth to accommodate your chosen window coverings. Inside mounting is ideal for sash (double-hung) windows.

INSIDE MOUNT



**Wood Blinds require 3/4" of depth to install or 3 1/4" to install fully recessed with valance attached.**

**OUTSIDE MOUNT** can give somewhat better light-blocking, but covers up all (Standard) or some (First-Tier) of your window trim. For casement windows (window cranks, locks and screens on the inside), we recommend outside mount to avoid interference with these items.

OUTSIDE MOUNT  
STANDARD



OUTSIDE MOUNT  
FIRST TIER




## Step Two: Measure

For best results, use a steel tape measure and carefully measure to the nearest 1/8".

### INSIDE MOUNT

1. Measure width across the top, center and bottom. **Use narrowest width.**
2. Measure length left, center and right. **Use longest length.**
3. Order product Inside Mount

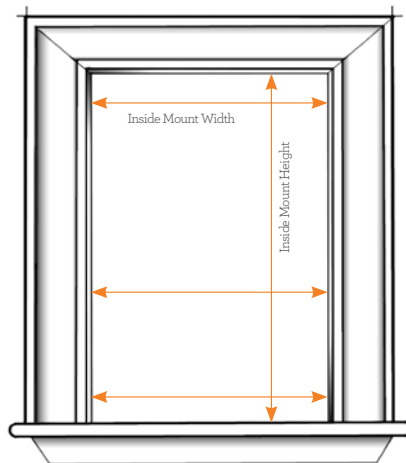


**Note: Do not take any deductions. We will make the necessary deductions for inside mount.**

### OUTSIDE MOUNT

*If you have a standard beveled 2 1/4" trim, or 3 1/2" trim, you have the option of measuring on the first tier of the trim or to the edge of the trim. Edge of trim is recommended for 2 1/4" trim; first tier is recommended for 3 1/2" trim.*

1. If measuring to the edge of the trim, measure from edge to edge across the top, middle and bottom for the width, and from the top of the upper trim to the sill (or bottom of lower trim) for the height. **Use longest length.**
2. If measuring in the first tier, measure width from the outer edge of the first tier on one side to the outer edge of the first tier on the other side, measure in 3 places and **use largest width**. For the height, measure from the upper edge of the first tier on top to the sill (or lower edge of the first tier on the bottom).
3. Order product as Outside Mount

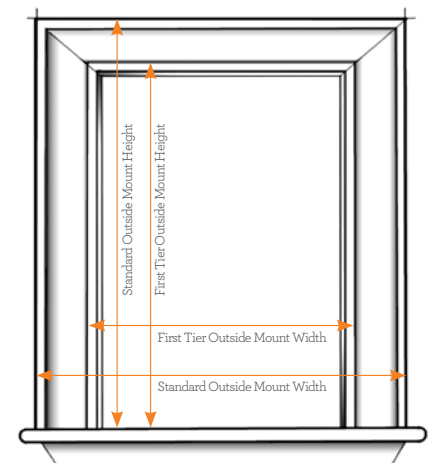

**IF YOU HAVE FURTHER QUESTIONS ABOUT MEASURING CALL 800.963.9832.**

Made to order, sized to fit.

	<b>Depth Requirements</b>		<b>Finished Product Size Relative to Ordered Size</b>			
	Inside Mount		Inside Mount		Outside Mount	
	Install	Fully Recess	Headrail Width	Slat Width	Headrail Width	Slat Width
Premium / Classic Wood (Standard Valance)	3/4"	3 1/8"	-1/2"	-1/2"	-3/8"	Ordered Width
Premium Wood (Deluxe & Chalet Valance)	3/4"	3 3/8"	-1/2"	-1/2"	-3/8"	Ordered Width
Premium Wood (Hamilton & Contempo Valance)	3/4"	3 5/8"	-1/2"	-1/2"	-3/8"	Ordered Width
Faux Wood (Standard Valance)	3/4"	3 1/8"	-1/2"	-1/2"	-3/8"	Ordered Width
Faux Wood (Crown Valance)	3/4"	3 3/8"	-1/2"	-1/2"	-3/8"	Ordered Width

**Stacking Chart** When fully raised, blinds create a stack that covers part of your window.

PRODUCT	SHADE HEIGHT IN INCHES				
	36"	48"	72"	96"	120"
2" Wood / Faux Wood	5 5/8"	6 5/8"	8 1/2"	10 1/2"	12 3/8"
2" Wood with Cloth Tape	6 1/4"	7 5/8"	10 1/8"	12 3/4"	15 3/8"

Please note these stack sizes are approximate.

**IF YOU HAVE FURTHER QUESTIONS ABOUT MEASURING CALL 800.963.9832.**